


NOTE: FASTEN FURRING INTO ALIGNED STUD OR HORIZONTAL BLOCKING. SPACING PER ENGINEER-ING, 2'-0" O.C. MAX The EF Series

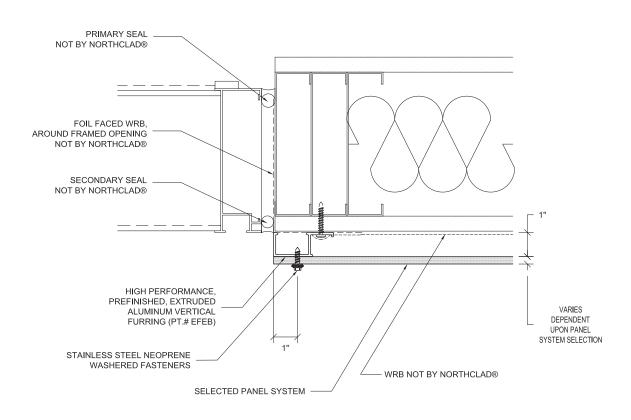

For details without exterior insulation, or to download the CAD version of this detail, please see www.northclad.com.

@ 2009 NorthClad® Rainscreen Solutions Everett, WA \cdot (425) 487-1111

