
Fasten Furring
Into Aligned Stud
Or Horizontal
Blocking. Spacing
Per Engineering,
2'-0" O.C. MAX

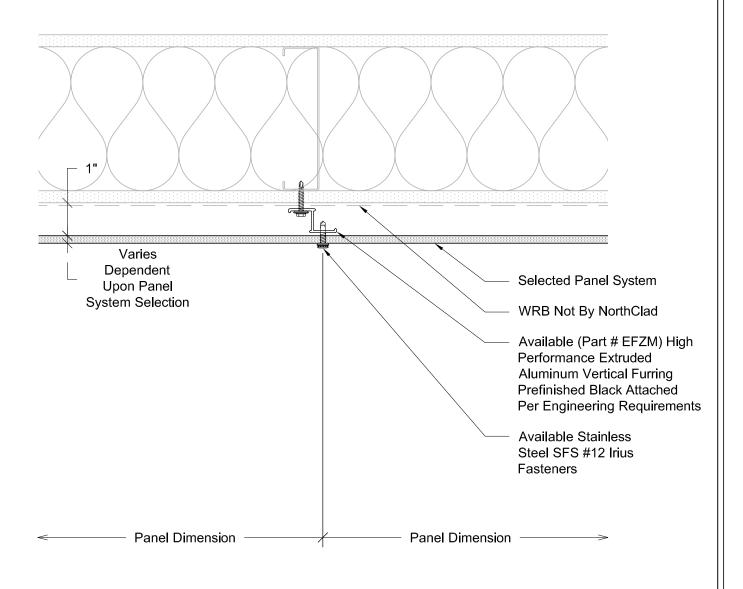

C Plan View - NorthClad EF - Vertical Fastener

DET REFERENCE: NorthClad EF System



11831 BEVERLY PARK RD. BUILDING C, EVERETT, WA 98204 * PHONE: 425.740.3702 * FAX: 425.485.3503 * www.northclad.com

This document is property of NorthClad and should not be used, duplicated or modified without the express written consent. Copyright © 2010

NorthClad All Rights Reserved

]	NO.	DESCRIPTION	DATE	INIT.	Project
l	1	For Submittal	1.5.2015	INT	
l	2				
l	3				
	4				
l	5				
l	6				
l	7				
]	8				
	9				
	10				

EF System

3" = 1'-0"

Job Number

Sheet

04-DET

APPROVED