


Fasten Furring Into Aligned Stud Or Horizontal Blocking.
Spacing Per Engineering, 16"
O.C. MAX

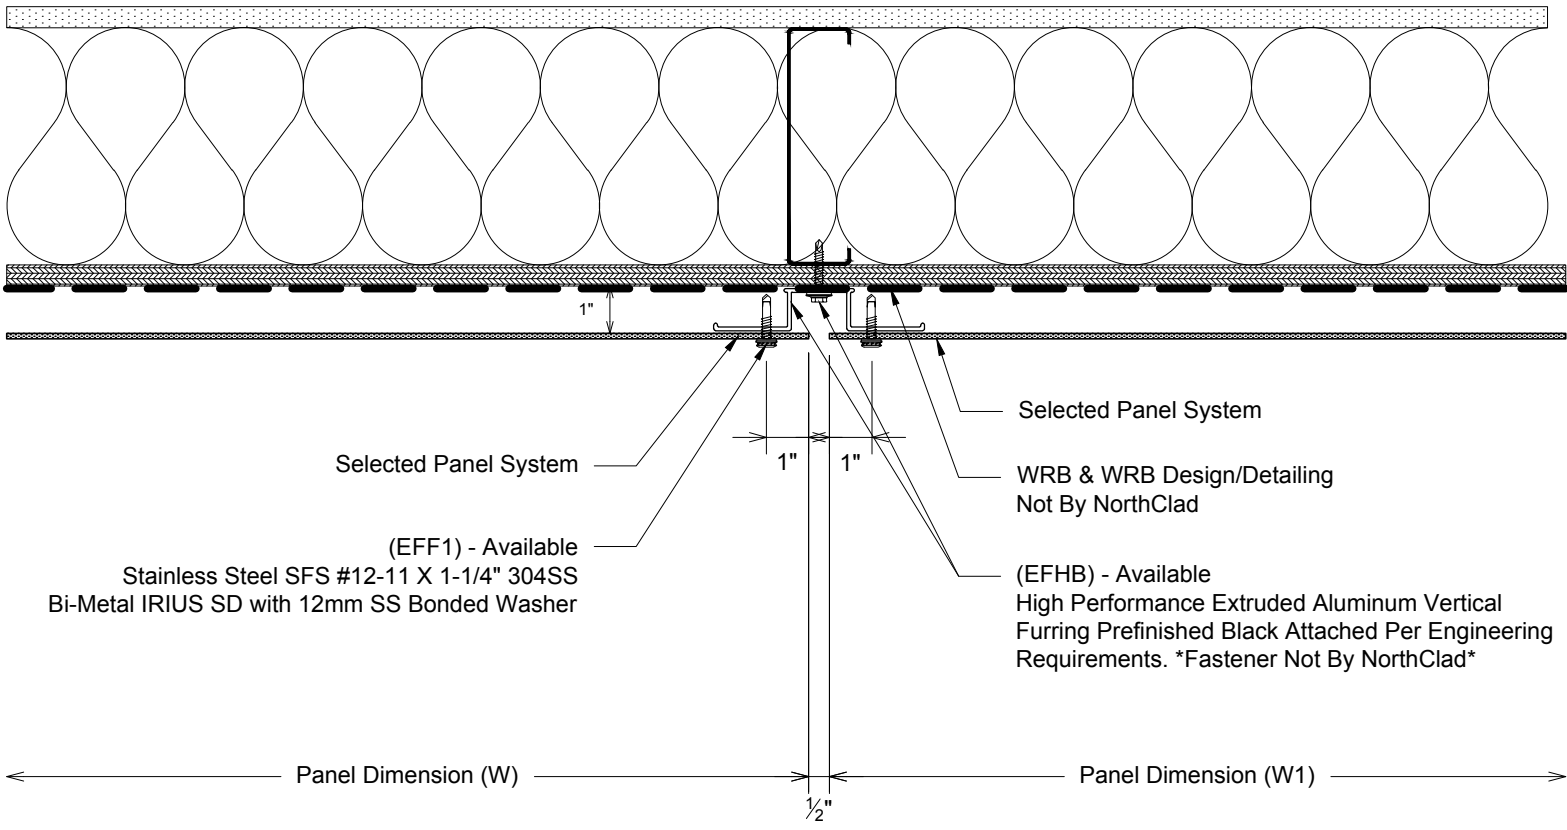

B

Plan - Vertical Joint
System: NorthClad EF System