


Fasten Furring Into Aligned Stud Or Horizontal Blocking.
Spacing Per Engineering, 16"
O.C. MAX

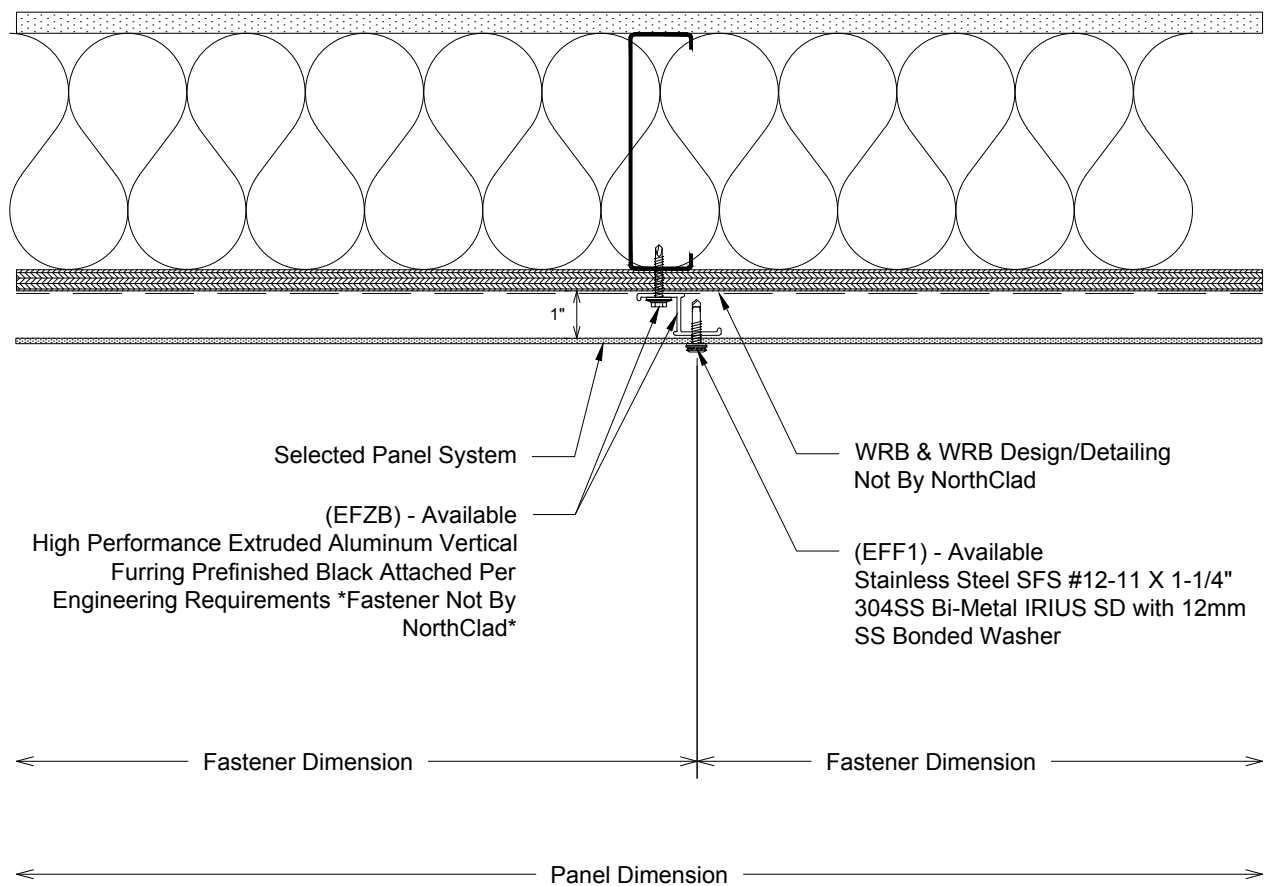

C

Plan - NorthClad EF - Vertical Fastener
System: NorthClad EF System