


Fasten Furring Into Aligned Stud Or Horizontal Blocking.
Spacing Per Engineering, 16"
O.C. MAX

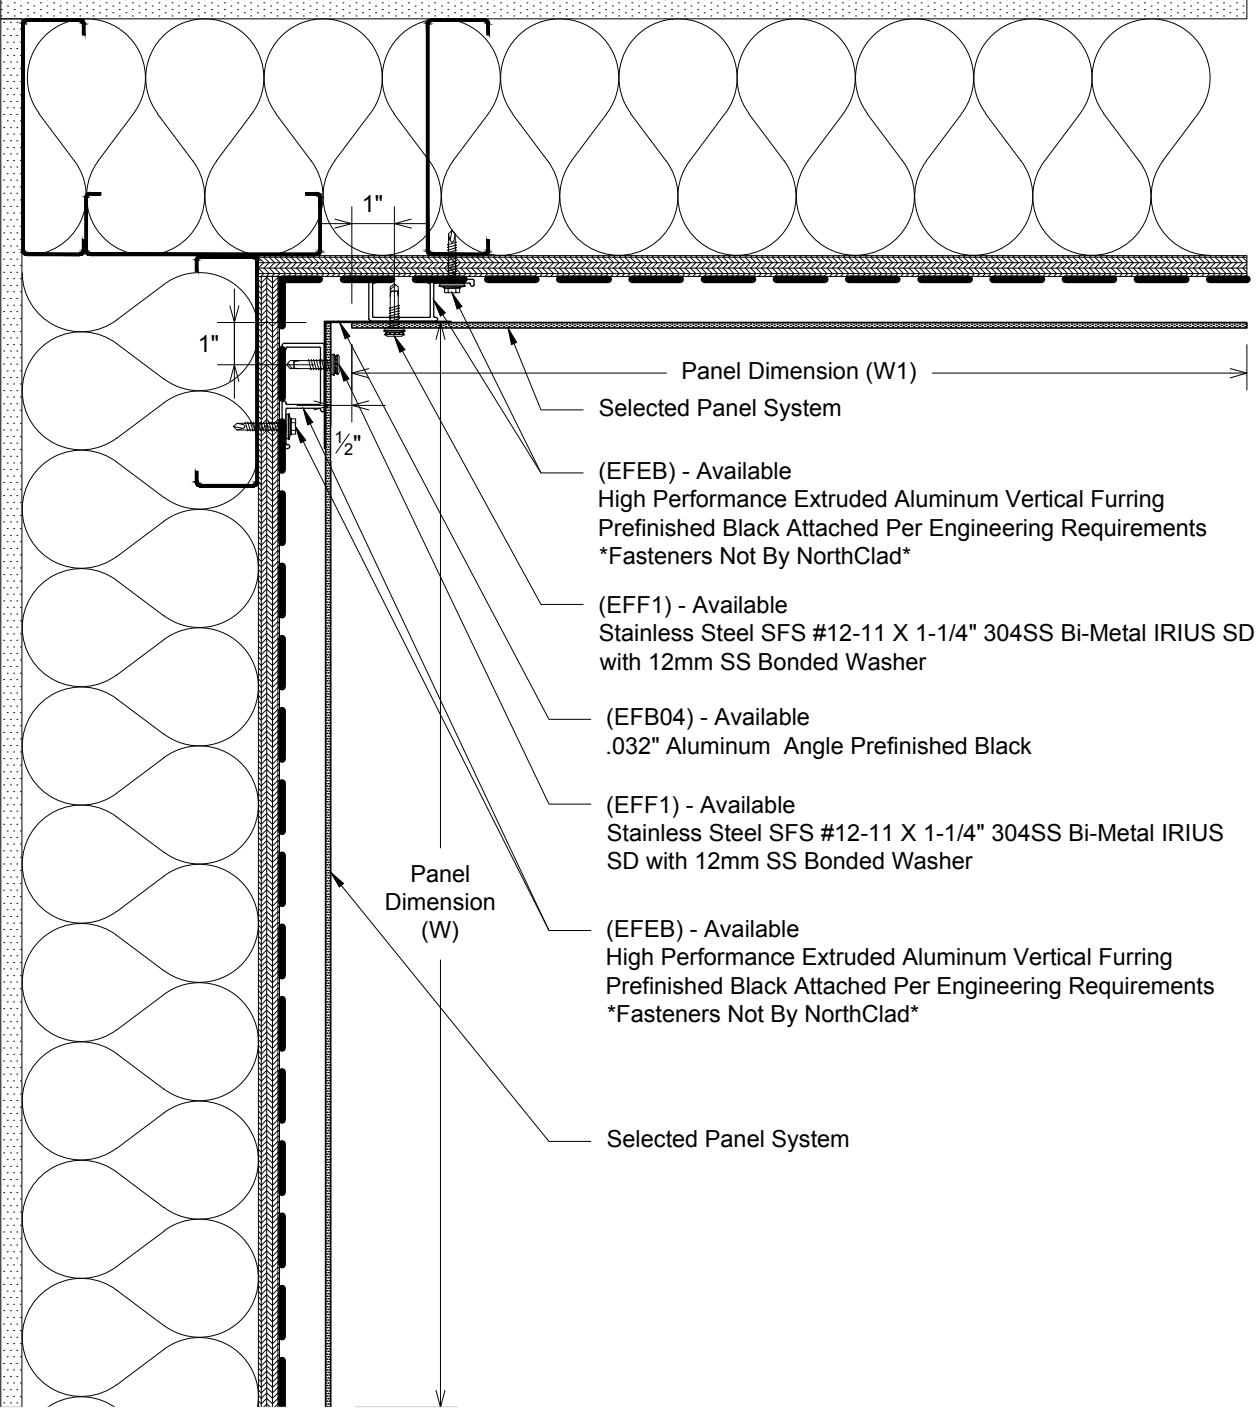

H

Plan - NorthClad EF - Inside Corner
System: NorthClad EF System