


Fasten Furring Into Aligned Stud Or Horizontal Blocking. Spacing Per Engineering, 16" O.C. MAX

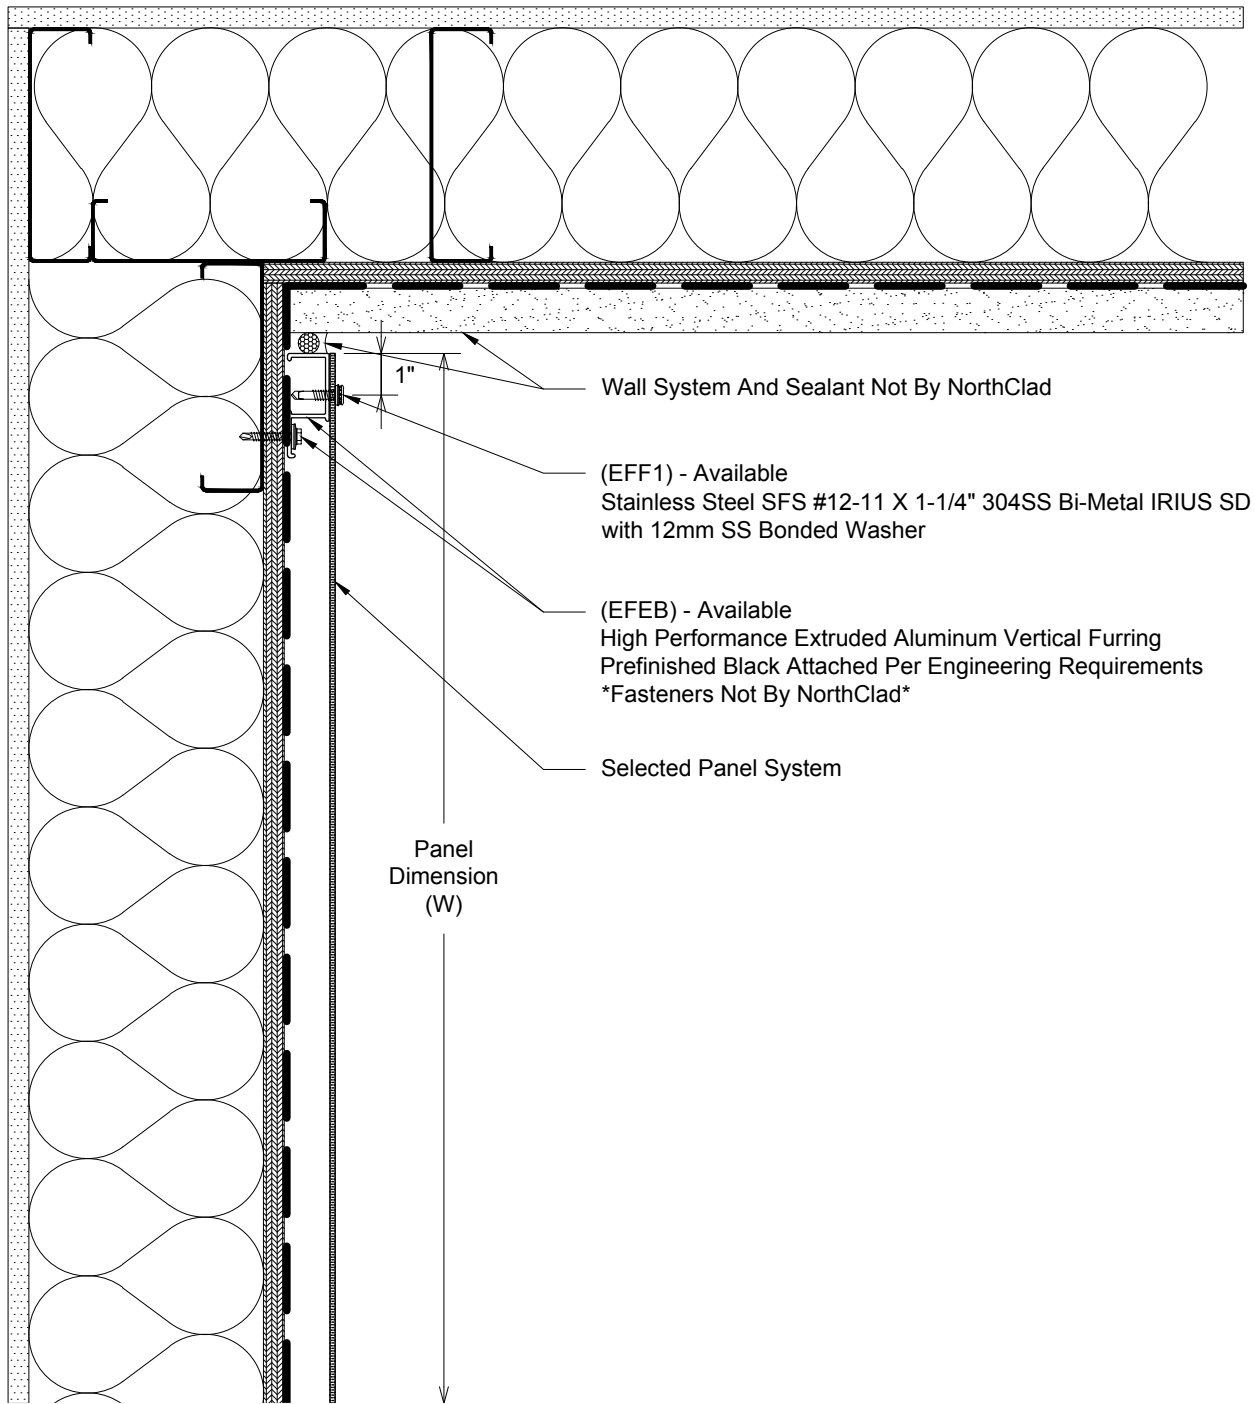

M

Plan - NorthClad EF - Inside Corner Termination  
System: NorthClad EF System