


Fasten Furring Into Aligned Stud Or Horizontal Blocking. Spacing Per Engineering, 16" O.C. MAX

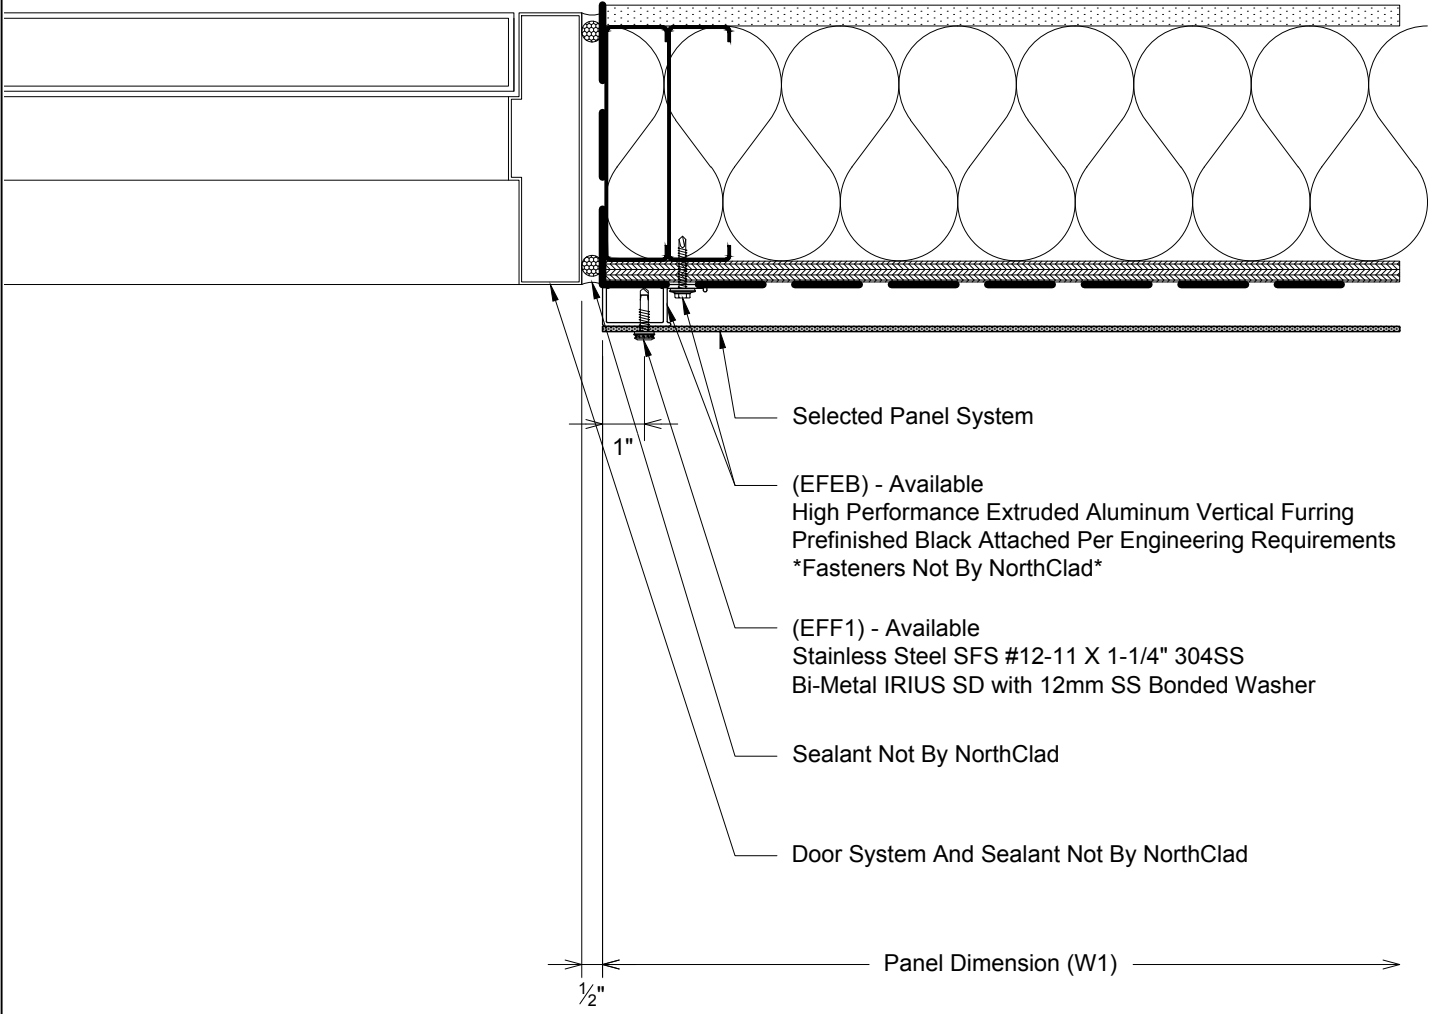

R1

Plan - NorthClad EF - Framed Opening Door Jamb  
System: NorthClad EF System