


Fasten Furring Into Aligned Stud Or Horizontal Blocking. Spacing Per Engineering, 16" O.C. MAX

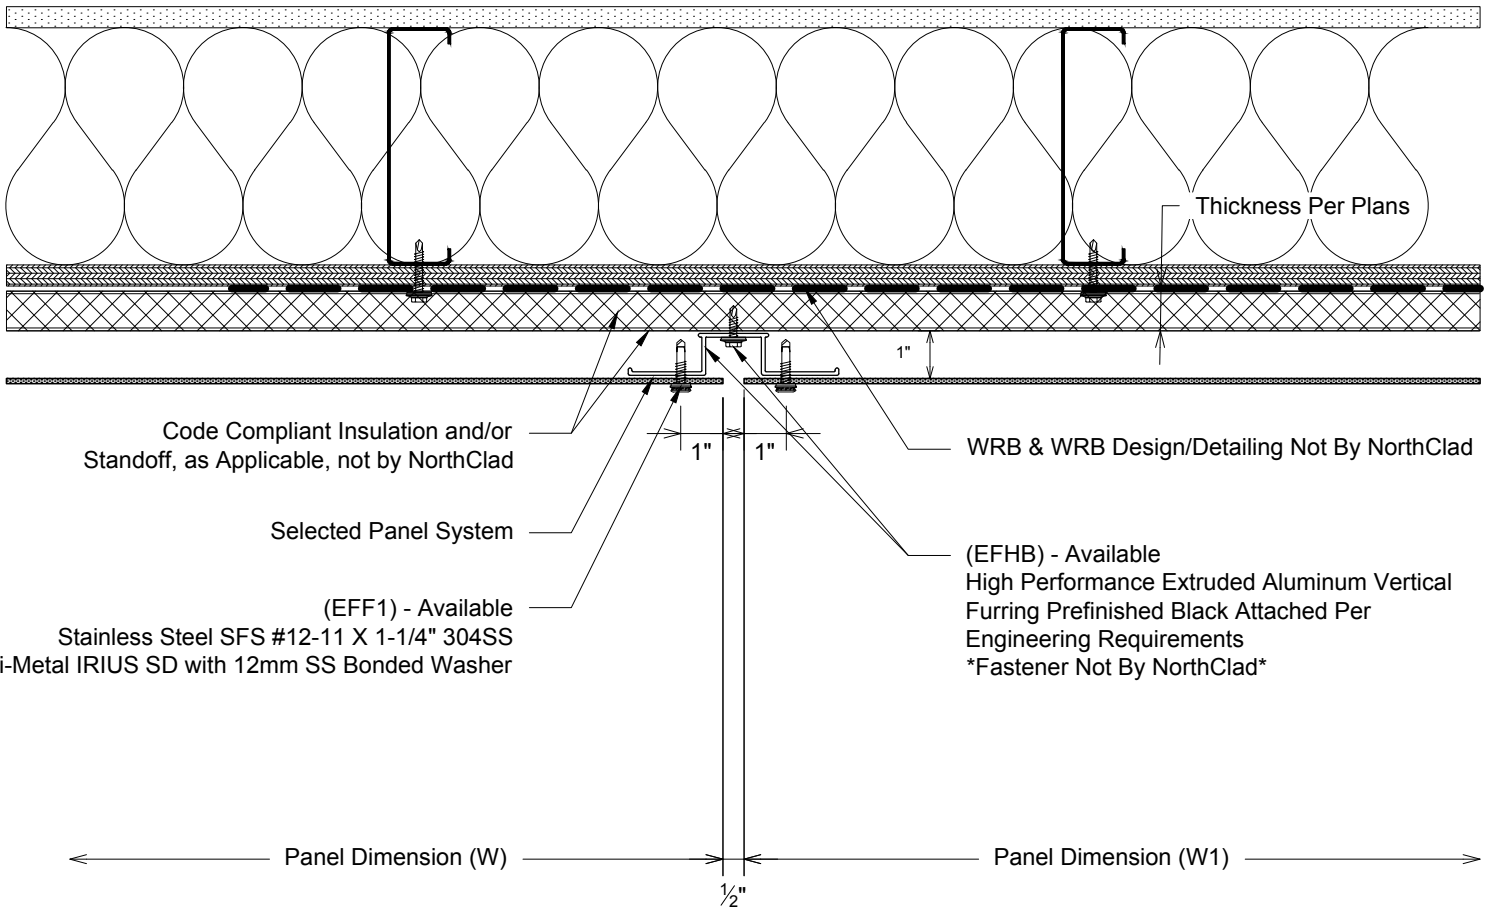

B

Plan - Vertical Joint
System: NorthClad EF System